











































Quick User Guide

Thank you for choosing LightSYS intruder control panel. This quick start guide describes the main user operating actions of the LightSYS. To view the full version of the user manual, please refer to our website www.riscogroup.com.

Away Arm	Code > 
Stay Arm	Code > 
System Disarm and Silence an Alarm	Code> 
Partition Away Arm	Code >  > Partition No. > 
Partition Stay Arm	Code >  > Partition No. > 
Partition Disarm	Code>  > Partition No. > 
Duress Unset	Duress Code > 
Panic Alarm	Pressing   simultaneously for 2 seconds
Fire Alarm	Pressing   simultaneously for 2 seconds
Medical Alarm	Pressing   simultaneously for 2 seconds
Quick Zones Bypass	Code >  [Zone No.]
Activate Output	 [Code]  [Activities]  [Util Output Num]
Define Follow-Me	 > [Code]  [Follow Me]  [Define]
View Trouble	 [Code]  [View]  [Trouble] 
View Event Log	 [Code]  [Event Log] 
Keypad Chime On/Off	 [Code]  [Activities]  [Keypad sound]  [Chime]
Edit User Code	 [Code]  [Codes/Tags]  [Define]
Zone Testing (Walk Test)	 [Code]  [Maintenance]  [Walk Test]  

Indicators:



(Power):

On: Power OK, No troubles

Off: No power

Rapid Flash: System trouble

✓ (Ready):

On: Ready to arm

Off: Not ready to arm

Slow Flash: Ready to arm
with open Exit/Entry zone



(Arm) / RED LED

On: System armed
(Away or Stay)

Off: System disarmed

Slow Flash: System is in
Exit Delay

Rapid Flash: Alarm



(Tamper):

On: Tamper alarm

Off: No tamper alarm



(Stay / Bypass):

On: System armed at Stay /
Bypass zones in the system

Off: No bypass zones



(Fire):

On: Fire alarm

Off: No fire alarm

Flash: Fire trouble










Edit User Code

1. From the main display press
2. Enter master code (default code 1234) followed by
3. Scroll to the option Codes/Tags >
4. Scroll to Define and press
5. Select a user and press
6. Select Edit Code and press
7. Enter the new code followed by
8. To edit user label scroll to Edit Label and enter label.
9. Repeat the above steps for additional codes.

Assign Proximity Tag

1. Follow steps 1-5 of the Edit User Code above.
 2. Select (Re)Write tag and press
 3. Within 10 seconds, approach the proximity tag to the keypad.
-

Setting and Changing System Time and Date

1. Press  and enter grand master code followed by .
2. Using the arrow keys, scroll to the option **Clock** and press .
3. The display will show **Time & Date**. Press .
4. Enter the correct time in 24-hour format and date. For entering the date use the   keys to move the cursor and the / key to toggle among the choices.
5. Press  to save your settings.

SMS Control Commands

Controlling the System through SMS

(Note: Available only if your LightSYS is equipped with the GSM module)

SMS Structure: [User Code][*Command*]

Full arm: [Code] *A*

Home Arm: [Code] *H*

Group Arm: [Code][G][Select Group A/B/C/D)]

Full Disarm: [Code] *D*

Partition Arm: [Code] *A* [Partition No.]

Partition Disarm: [Code] *D* [Partition No.]

Bypass zone: [Code] *B* [Zone number]

Unbypass zone: [Code] *UB* [Zone number]

Activate Output: [Code] *UOON* [UO No.]

Deactivate Output: [Code] *UOOFF* [UO No.]

Get system status: [Code] *ST*

Get SIM credit level: [Code] *CR*

Change FM number: [Code] *FMPHONE* [FM serial number] *NEW* [New Phone No.]

Examples:

To arm the system send SMS: 1234A

To arm partition 1 and 2 send SMS: 1234A12

To disarm partition 1 send SMS: 1234D1

Notes:

1. Command words are not case sensitive (they can contain both capital, small or mixed letters).
2. A separator between command words is not required, although it is accepted.
3. Default grand master code is 1234.

Telephone Control Commands

Remark: Available only if your LightSYS is equipped with the voice module.

Receiving a call:

1. Pick up the phone.
2. Say "Hello" press [#]. You will hear an event announcement message.
3. Choose an option from the

Acknowledgment menu.

Acknowledgment menu

- Acknowledge message: [1]
Acknowledge and stop all dialing: [2] [User code] [#]
Access Operations menu: [3] [User code] [#]
Listen and Talk: [6] [3] [User code]
Repeat the event message: [#]
Repeat the Acknowledgment menu: [*]
-

Calling the System:

1. Dial the number of the premises.
 - If an answering machine is present at the premises: Let the line ring once, hang up and call again.
 - If an answering machine is not in use at the premises: Wait until the system picks up. You will hear a continuous tone.
 2. After the tones, enter the 2-digit remote access code.
 3. Enter your user code followed by [#].
 4. Choose your option from the
- #### Operations menu.

Operations Menu:

- Arming all Partitions: [1] [1]
Arming by Partition: [1] [9] [Partition no.]
Disarming all Partitions: [2] [2]
Disarming by Partition: [2] [9] [Partition no.]
Changing Zone Bypass: [3] [Zone no.] [#] [9]
Operating Utility Outputs: [4] [UO no.]
Changing FM Numbers: [5] [FM no.] [#] [2]
[New phone no.]: [#] [1]
Listen in: [6] [1]
Talk: [6] [2]
Listen and Talk : [6] [3]
Record Messages : [7]
Exiting the System: [0]
Repeat the Menu: [#]
Return to previous menu: [*]
-